



EV & Forklift Parts

**CURTIS DC Series Motor Controller Parameter List**  
**Model: 1253-4804**

No.	Parameter	Min	Max	Default Value	Unit	Programmer Access Level	
						Read	Write
1	MAIN C/L(x10A)	20	60	60		OEM	OEM
2	SS1 SPEED	0	100	25		User	User
3	SS2 SPEED	0	100	25		User	User
4	SS3 SPEED	0	100	25		User	User
5	SS4 SPEED	0	100	25		User	User
6	THRTL MAX SPD	0	100	25		User	User
7	MINIMUM SPEED	0	50	0		User	User
8	ACCEL RATE	0.2	3	1	Seconds	User	User
9	SS ADD MODE	Off	On	On		OEM	OEM
10	SS HIGH SPEED ON	Off	On	Off		OEM	OEM
11	FINAL ADD MODE	Off	On	On		OEM	OEM
12	THRTL FAULT	Off	On	Off		OEM	OEM
13	THROTTLE TYPE	0	3	0	#	OEM	OEM
14	THRTL DEADBAND	4	90	10	%	OEM	OEM
15	THROTTLE MAX	10	100	90		OEM	OEM
16	THROTTLE MAP	20	80	50		OEM	OEM
17	SS1 LIFT LOCK	Off	On	Off		OEM	OEM
18	SS2 LIFT LOCK	Off	On	Off		OEM	OEM
19	SS3 LIFT LOCK	Off	On	Off		OEM	OEM
20	SS4 LIFT LOCK	Off	On	Off		OEM	OEM
21	THRTL LIFTLOCK	Off	On	Off		OEM	OEM
22	LOCKOUT TYPE	0	3	0		OEM	OEM
23	PRECHARGE	Off	On	On		OEM	OEM
24	PRECHARGE DLY	0	1000	380		OEM	OEM
25	STARTUP LOCK	0	2	1		OEM	OEM
26	CONTACT CNTRL	Off	On	On		OEM	OEM
27	CONT PULL IN	48	60	48		OEM	OEM
28	CONT HOLDING	12	48	48		OEM	OEM
29	SS4 DELAY	0	60	0		OEM	OEM
30	INTERLOCK DLY	0	60	5		OEM	OEM
31	LOVOLT CUTBACK	32	42	36		OEM	OEM
32	LOVOLT CB RATE	0	20	3		OEM	OEM

**NOCO SHOP**

Website: <http://www.noco-ev.com/> - Email: [info@noco-ev.com](mailto:info@noco-ev.com)